



# Hyper Card 3G Installation

## A. Cutting the SIM Card

1. Please put the sticker on the front of SIM Card.

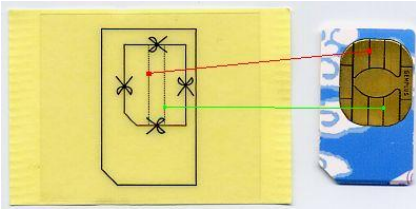

2. Please follow the lines in red and green and put the sticker on SIM as above. If correct, it will be same as the picture as below :

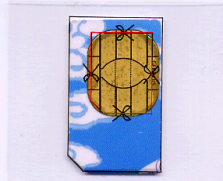


3. Please cut the SIM Card alone with small SIM shape as above. You can get a small SIM Card as below :




## B. Installation

 1. Install one small SIM in 2<sup>nd</sup> socket and cover with steel plate as below :



2. Insert another Small SIM to 1<sup>st</sup> socket, then cover the plate completely as below :

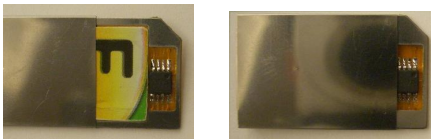

## D. Using Hyper Card 3G

1. Insert Hyper Card to the mobile phone. The SIM in 1<sup>st</sup> socket will be on line, when power on..
2. Select the STK menu, find the "Hyper Card" as below : (Default is SIM-1, the "\*" mark means on duty)




3. Select the SIM-1 or SIM-2 to the network. The one you selected will connect to the network in few seconds...
4. Auto switch in Menu – special function to make your SIM-1 and SIM-2 on duty in turn every three minutes (Option)

## E. Using the Recovery Card

You can use Recovery Card to restore your SIM Card, when not using Hyper Card.

1. Find the Recovery Card from the package (2pcs). Put the small SIM in the Recover Card as below :

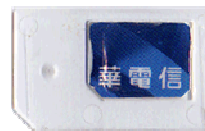

3. Put the Sticker on the Recovery Card and cut the sticker as the shape of SIM.